 
 


WE BELIEVE CHROMEBOOK MADERA UNIFIED GENERAL USE


CONNECTING TO YOUR HOME WIFI

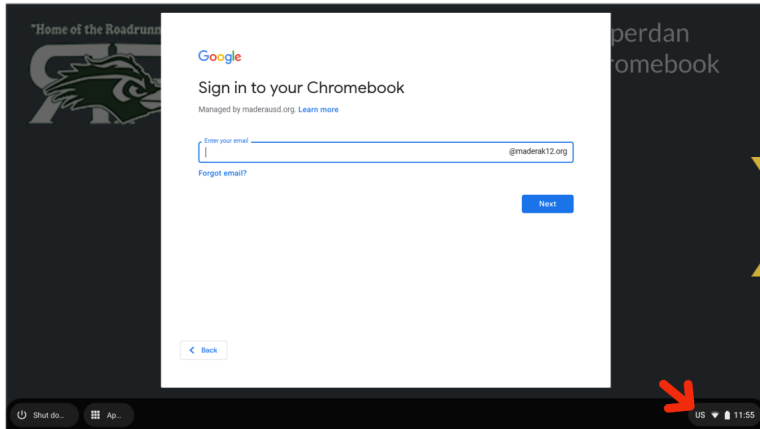


CLICK THE WIFI ICON IN THE BOTTOM-RIGHT CORNER OF THE SCREEN

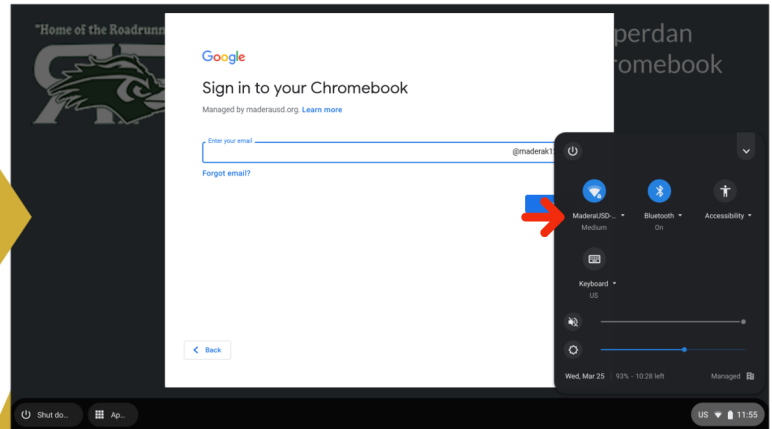

 IN THE MENU THAT APPEARS CLICK THE TEXT JUST BELOW THE WIFI ICON

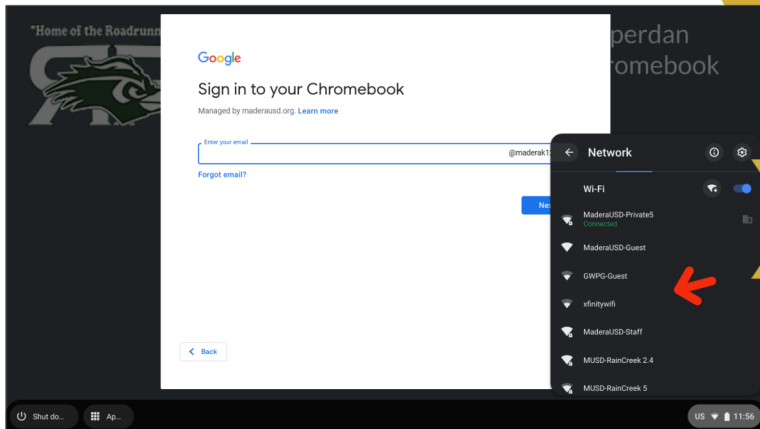

SELECT YOUR HOME WIFI FROM THE LIST

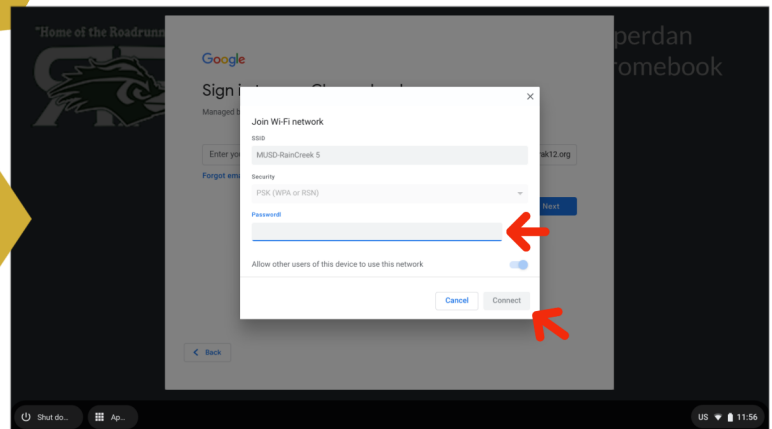 

ENTER YOUR WIFI PASSWORD AND THEN SELECT CONNECT

CHARGING YOUR CHROMEBOOK

MAKE SURE YOU RECEIVE
A CHARGER WHEN YOU
PICK UP YOUR CHROMEBOOK



THE CHARGING PORT CAN BE
FOUND ON THE LEFT SIDE OF THE
CHROMEBOOK



YOU'LL SEE THE CHARGING LIGHT
TURN ON WHEN THE CHROMEBOOK
IS CHARGING

